




LANDIRENZO®

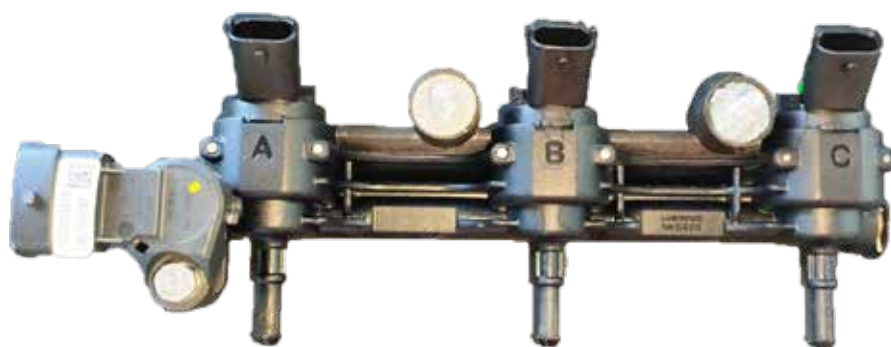

RSA GAS INJ RAIL REPLACEMENT INSTRUCTIONS

LPG SYSTEM

SUMMARY

GAS INJ RAIL POSITION	3
GAS INJ RAIL REPLACEMENT	4



Never tamper with original Landi Renzo components especially if the engine is running or the ignition is on.



Never wash the engine or components in the engine bay with high pressure water as this could lead to water getting into components (ECU, regulator, injectors etc.) and causing damage.


LANDI RENZO S.p.a. will not accept any responsibility for harm or damage caused by unauthorised personnel tampering with its components.

POSITION






1) Remove car pipes to simplify operations

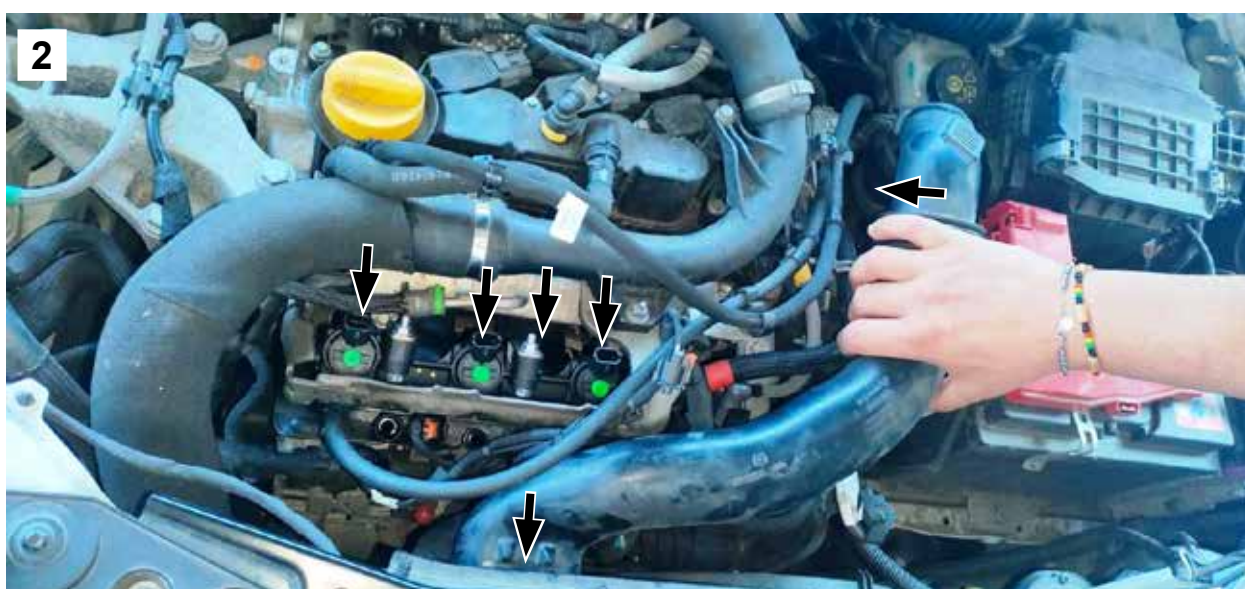

2) Remove gas inj connectors, P-T gas connector, remove air tube.



3) Remove rail water pipes and put the plug.

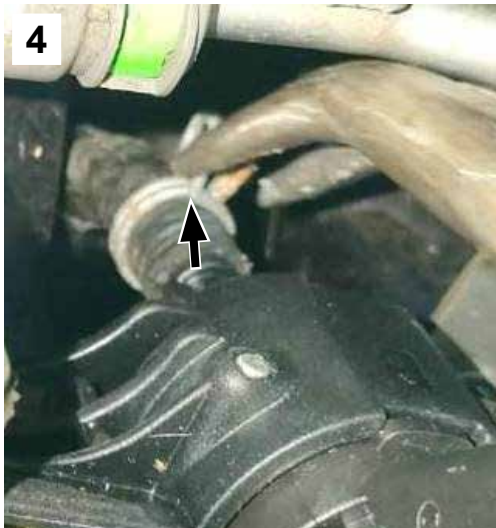


4-5) Remove clips and pipes.



6) Unscrew the rail fixing bolts/nuts.



7) Remove the rail.

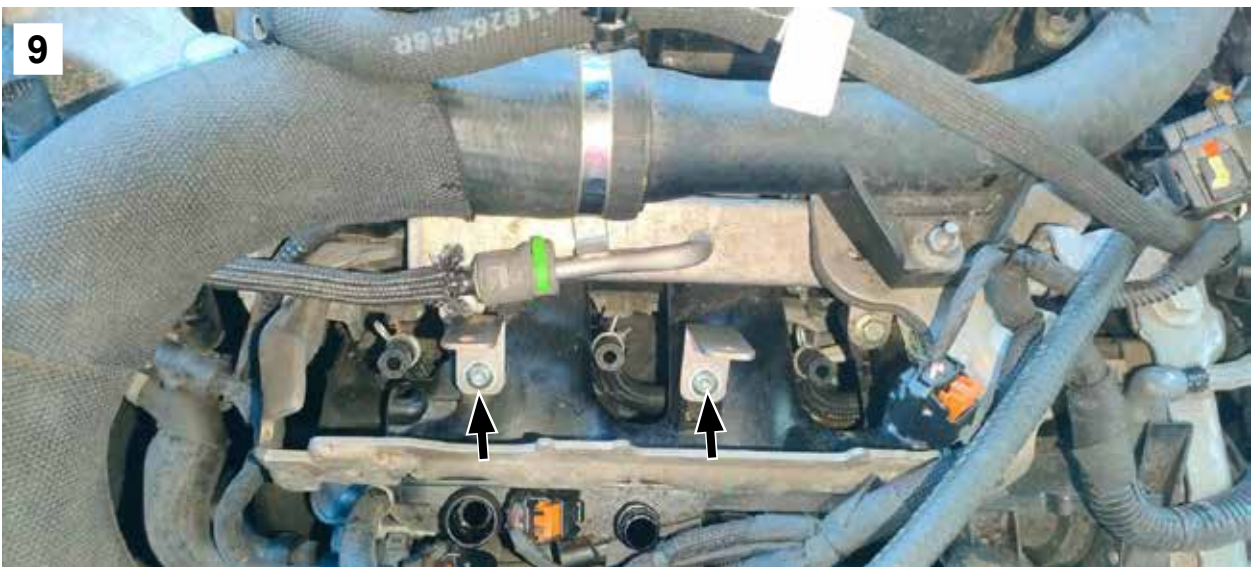

8-9) Insert and fix the brackets as shown



10) Insert new model rail as shown.



11-12) Place and fix the rail as shown.



13) Insert the gas pipes and fix the clips.



14) Insert P-T gas connector.



15) Insert gas pipe and fix the clip





16) Put gas inj connectors.



17) Put all the pipes back.



LANDIRENZO®

VIA NOBEL 2 | CAVRIAGO (RE) | ITALY
ph. +39 0522 9433 | info@landirengo.com



www.landirengo.com